


Supplies: Super-size drinking straw (5/16" - 3/8" dia.)  
Glue  
Cardboard

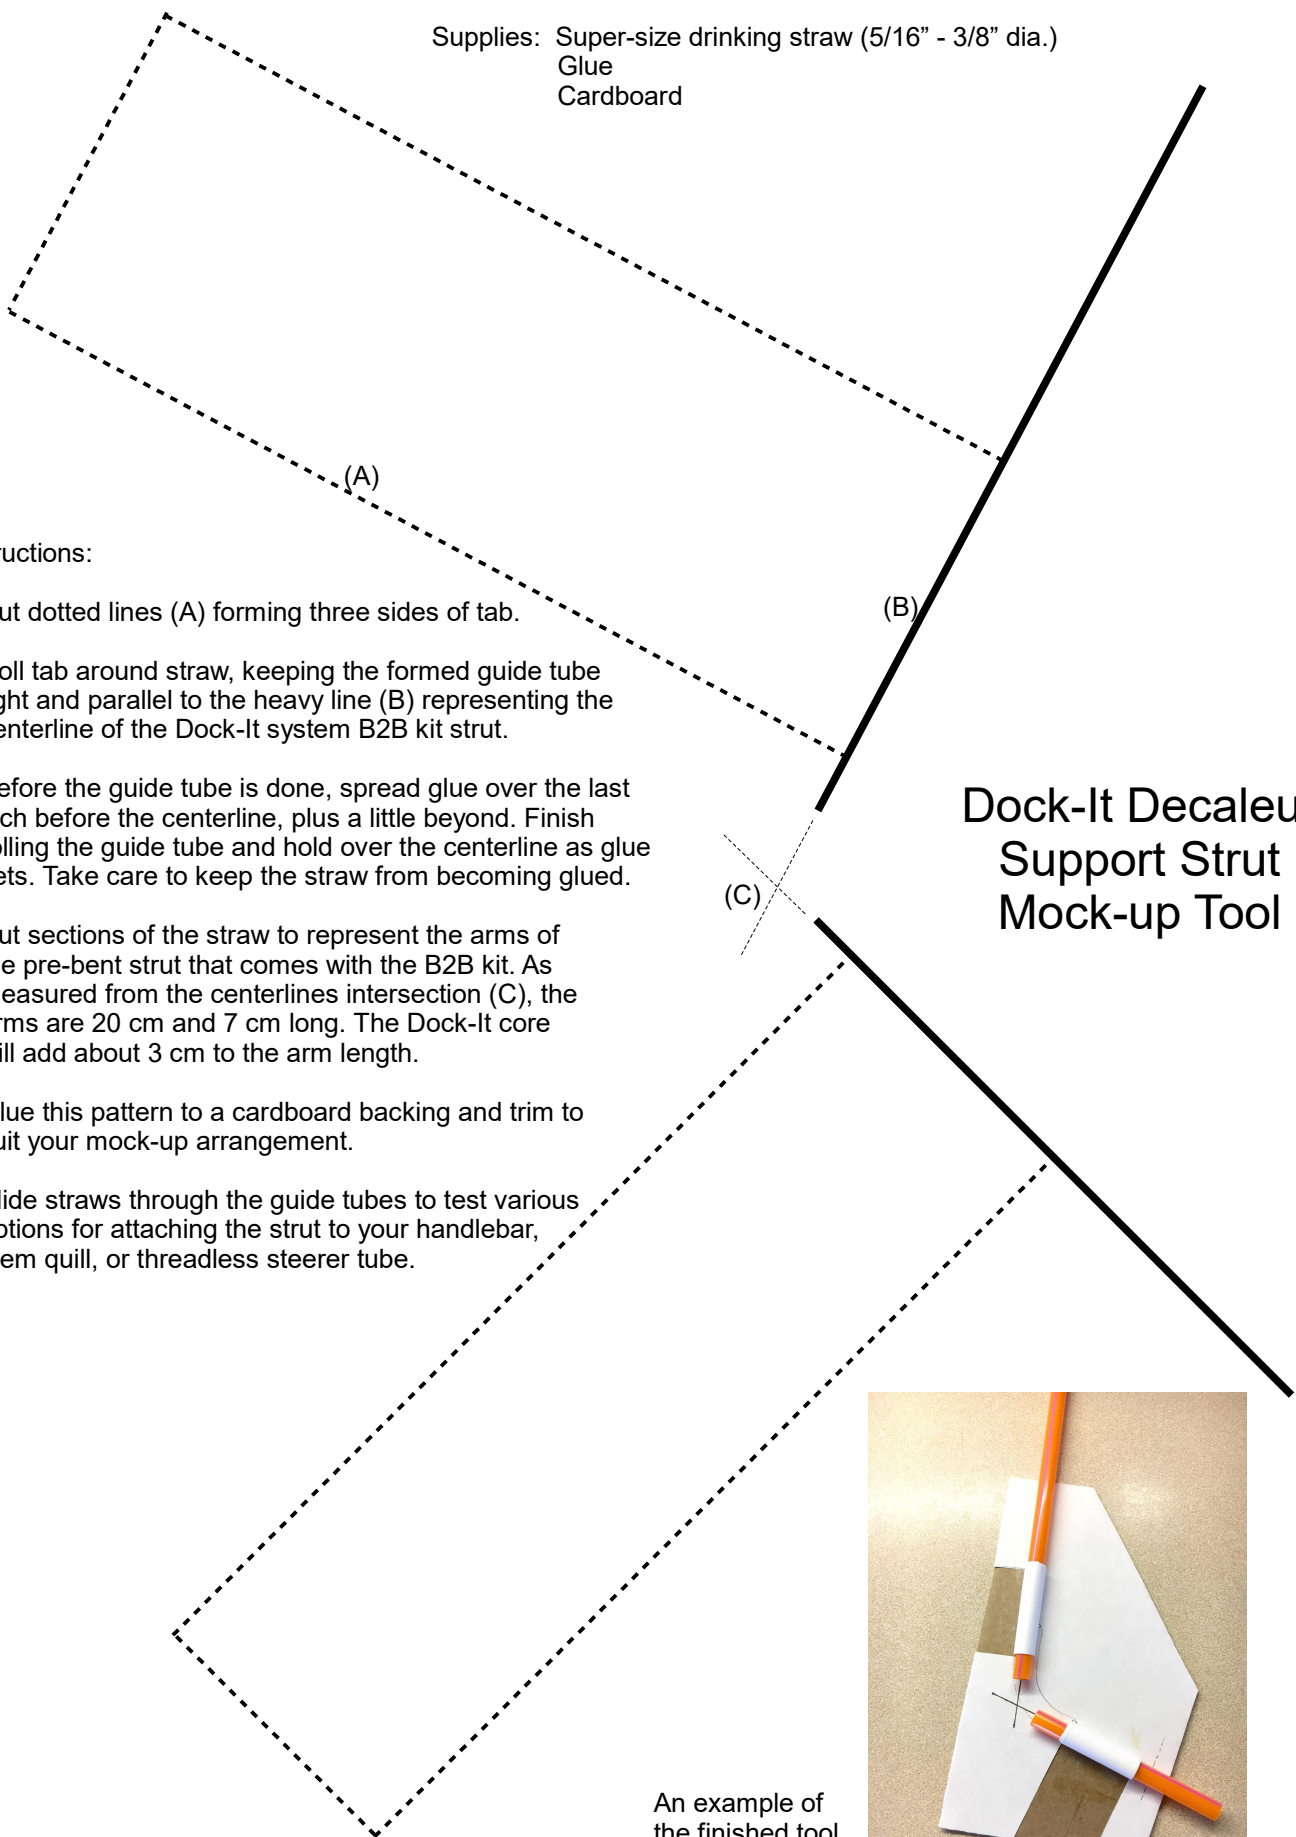

Instructions:

1. Cut dotted lines (A) forming three sides of tab.
2. Roll tab around straw, keeping the formed guide tube tight and parallel to the heavy line (B) representing the centerline of the Dock-It system B2B kit strut.
3. Before the guide tube is done, spread glue over the last inch before the centerline, plus a little beyond. Finish rolling the guide tube and hold over the centerline as glue sets. Take care to keep the straw from becoming glued.
4. Cut sections of the straw to represent the arms of the pre-bent strut that comes with the B2B kit. As measured from the centerlines intersection (C), the arms are 20 cm and 7 cm long. The Dock-It core will add about 3 cm to the arm length.
5. Glue this pattern to a cardboard backing and trim to suit your mock-up arrangement.
6. Slide straws through the guide tubes to test various options for attaching the strut to your handlebar, stem quill, or threadless steerer tube.

**Dock-It Decaleur  
Support Strut  
Mock-up Tool**

An example of the finished tool

